

## 4 Bar MAP and Temperature Sensor P/N H-MAP4

**Drawing Revision 1 - 20/7/2016** 



www.youtube.com/efihardware



info@efihardware.com



www.facebook.com/efihardware

www.efihardware.com




(03) 9873 5400 +613 9873 5400



(03) 9873 5955 +613 9873 5955

# **Pressure Vs Voltage**

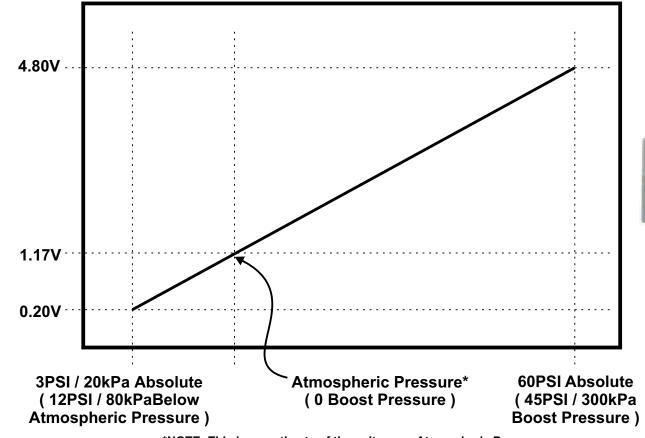

\*NOTE: This is an estimate of the voltage as Atmospheric Pressure changes with altitude and weather conditions

#### NOTES:

Absolute Pressure is any pressure above a complete vacuum. This sensor can measure above and below atmospheric pressure.

This is an active sensor. Do not use a pull-up resistor on the signal of this sensor. The output is driven to the correct voltage by the electronics inside the sensor.

#### CONNECTOR TO SUIT: D-DTM3PM



Pin 1: 0V (GND)

Pin 2: MAP SIG

Pin 3: +5V SUPPLY

### **APPLICATIONS:**

This sensor is most often used as a MAP sensor to monitor engine intake vacuum and pressure for an engine management system.

Max Boost Pressure - 45PSI / 300kPa