


Ignition Setup:

Output Type : Constant Charge
Coil Charge Time : 3.5(ms)
Output Edge : Falling

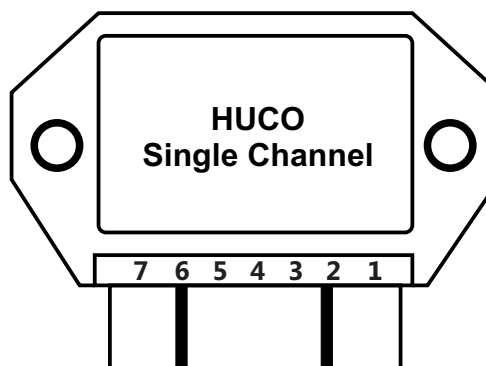

NOT USED
NOT USED
IGNITION OUTPUT FROM ECU
+12V IGNITION SWITCHED
NOT USED
CHASSIS GROUND
COIL NEGATIVE

NOTES:

This module requires the ECU to determine coil dwell time.

The coil charge starts as the Ignition Output from the ECU goes high.

The coil spark event happens when the Ignition Output from the ECU goes low.

This Ignition Module needs good heat sinking using heat sink paste.