

MAC Boost Control Valve Technical Diagram

Drawing Revision 1 - 29/10/2012



www.youtube.com/efihardware



info@efihardware.com



www.facebook.com/efihardware




(03) 9873 5400 +613 9873 5400



(03) 9873 5955 +613 9873 5955



www.efihardware.com

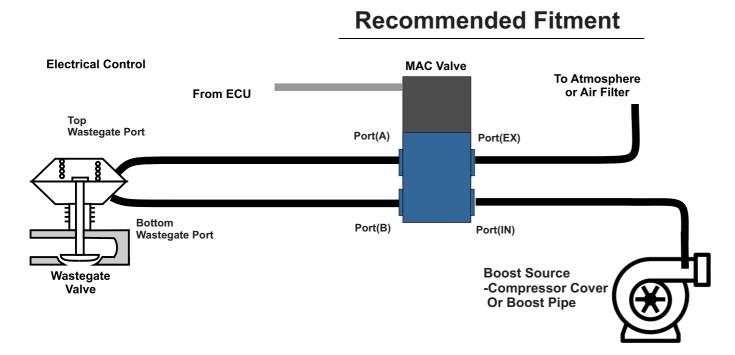

- Ports are 1/8 NPT
- Boot source must be boost only
 Do not connect to inlet manifold as
 there is a chance it an induce a vacuum
 leak

