

Single Sensor Distributor
Wiring Diagram
Revision 1 - 17/7/2012



www.youtube.com/efihardware



www.facebook.com/efihardware



www.efihardware.com




info@efihardware.com



(03) 9873 5400
+613 9873 5400




(03) 9873 5955
+613 9873 5955

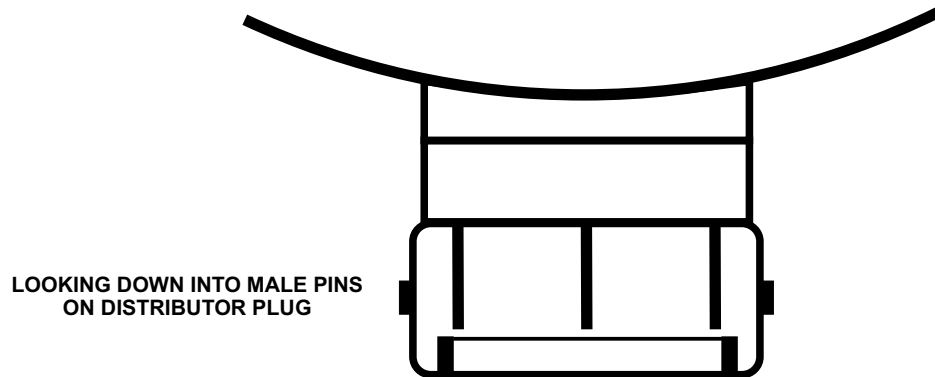

LOOKING DOWN INTO MALE PINS
ON DISTRIBUTOR PLUG

DISTRIBUTOR PLUG

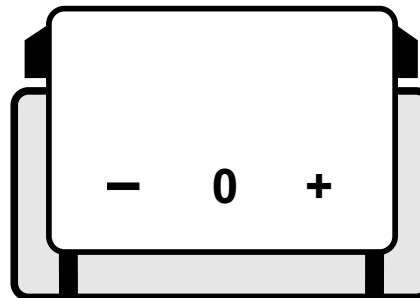

LOOKING AT THE SIDE OF
THE DISTRIBUTOR PLUG

- = Sensor/Signal Ground

0 = 8 Signal Pulses Per Distributor Rotation

+ = Switched Ignition +12V

**THIS WIRING DIAGRAM SUITS
THE FOLLOWING PRODUCTS**

H-DIST3C - 3 Pin Connector
H-DISTCLEV351S - Distributor
H-DISTWIN302S - Distributor

NOTE:

Consult your ECU supplier for more information on ECU configuration
and calibration.