



ACCESSORIES: H-MOD3C 3 PIN CONNECTOR

NOTES:

This coil igniter does not require a separate 12V supply. It sources its power supply from the coil negative while it is not dwelling the ignition coil.

Ensure you mount the igniter away from exhaust and other heat sources.

Apply heat transfer paste to the underside of the igniter before you mount the igniter to a heatsink.

EFI Hardware Mobile Apps



www.efihardware.com/apps.php