

EFI Hardware

4 Cyl Sequential Distributor Triggering Counter Clockwise - E.G. Nissan Installation Instructions Drawing Revision 1 - 12/11/2013



www.youtube.com/efihardware



info@efihardware.com



www.facebook.com/efihardware


www.efihardware.com



(03) 9873 5400 +613 9873 5400



(03) 9873 5955 +613 9873 5955

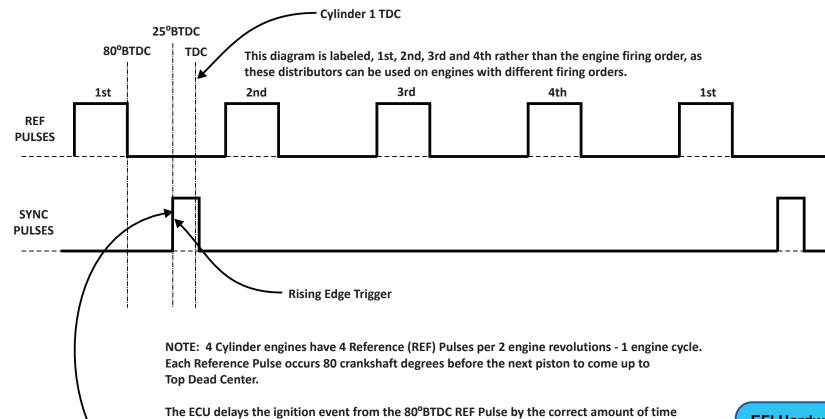

to deliver the ignition spark at the correct crankshaft angle for any given engine condition

The SYNC Pulse tells the ECU when the engine returns back to the first cylinder in the firing order.

(idle, full power, cruise, etc).

EFI Hardware Mobile Apps