



**NOTE: This Injector Boss is held into the manifold by the Fuel Rail and Fuel Injector. It does not require gluing or welding in place.**