


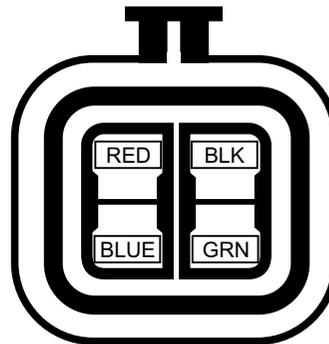

DISTRIBUTOR PLUG

LOOKING INTO FEMALE PINS
ON DISTRIBUTOR PLUG



RED - Red - Switched Ignition +12V

BLK - Black - Sensor/Signal Ground

BLUE - Blue - 1 Pulse Per Distributor Rotation

GRN - Green - 8 Pulses Per Distributor Rotation

**THIS WIRING DIAGRAM SUITS
THE FOLLOWING PRODUCTS**

H-DISTVTC - 4 pin Loom Connector
H-DISTHOL202 - Distributor
H-DISTCHEV350D - Distributor
H-DISTCLEV351D - Distributor
H-DISTWIN302D - Distributor
H-DISTVTSTD - Distributor
H-DISTCHRYS318D - Distributor

NOTE:

The Hall Effect Sensors in the VT Distributor only pull to ground. This means that your ECU will need to have pull-up resistors on the signal inputs.

The Trigger Edge is the Rising Edge for both the 1 pulse sensor and the 8 pulse sensor.

Consult your ECU supplier for more information on ECU configuration and calibration.